

# John Deere Models

## Planter Model JD 1710 VERTICAL FOLD

\*Note: Will not work next to wheel modules

|  | Row Cleaner & Mount  | Fertilizer Opener                        | Spiked Closing Wheels                  | RID-01  | Drag Chain |
|--|--|--|--|---|------------|
| Standard parallel arms, w/o no-till coulters, w/o fertilizer openers                 | BD1360 Floating C125S-XP<br>Floating B1332/772 Pin adjust<br>*B1532/772 Pin adjust<br>BD/UMO1360 Fertilizer opener/row cleaner combo   | UMO-100<br>Requires<br>UMO- MTJ<br>mount | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK01      |
| Standard parallel arms, with no-till coulters, w/o fertilizer openers                | BDC1360 Floating C125R-XP<br>Floating  | Will not work<br>with coulters           | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |
| Standard parallel arms, w/o no-till coulters, with frame mounted fertilizer openers  | BD1360 Floating C125S-XP<br>Floating B1332/772 Pin adjust<br>*B1532/772 Pin adjust   | Does not<br>apply                        | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |
| Standard parallel arms, with no-till coulters, with frame mounted fertilizer openers | No row cleaner will work   | Does not<br>apply                        | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |
| Extended parallel arms, w/o no-till coulters, w/o fertilizer openers                 | BD1360 Floating C125S-XP<br>Floating B1332/772 Pin adjust<br>*B1532/772 Pin adjust<br>BD/UMO1360 Fertilizer opener/row cleaner com- bo | UMO-100<br>Requires<br>UMO- MTJ<br>mount | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |
| Extended parallel arms, with no-till coulters, w/o fertilizer openers                | BDC1360 Floating C125R-XP<br>Floating  | Will not work<br>with coulters           | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |
| Extended parallel arms, w/o no-till coulters, with frame mounted fertilizer openers  | BD1360 Floating C125S-XP<br>Floating B1332/772 Pin adjust<br>*B1532/772 Pin adjust   | Does not<br>apply                        | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |
| Extended parallel arms, with no-till coulters, with frame mounted fertilizer openers | BDC1360 Floating   | Does not<br>apply                        | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |
| Extended parallel arms, with unit mounted double disk fertilizer openers             | BDD1360 Floating C125<br>Floating With C125MTL-XP<br>Mount   | Does not<br>apply                        | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |
| Extended parallel arms, with unit  | C125 Floating With C125MTXL-<br>XP Mount   | Does not<br>apply                        | BSCW1344<br>Dual                       | RID-01 XP<br>units require                        | DCK-01     |

|  |  |  |                 |                  |  |
|--|--|--|-----------------|------------------|--|
| mounted single disk fertilizer injector coulters |  |  | BSCW1544 Single | A56621 inner rim |  |
|--|--|--|-----------------|------------------|--|

## Planter Model JD 1720 STACK FOLD

\*Note: Will not work next to wheel modules

|  | Row Cleaner & Mount   | Fertilizer Opener               | Spiked Closing Wheels         | RID-01                                   | Drag Chain |
|--|---|---------------------------------|-------------------------------|--|------------|
| Standard parallel arms, w/o no-till coulters, w/o fertilizer openers                 | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust *B1532/772 Pin adjust BD/UMO1360 Fert opener row cleaner combo   | UMO-100 Requires UMO- MTJ mount | BSCW1344 Dual BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK01      |
| Standard parallel arms, with no-till coulters, w/o fertilizer openers                | BDC1360 Floating C125R-XP Floating  | Will not work with coulters     | BSCW1344 Dual BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Standard parallel arms, w/o no-till coulters, with frame mounted fertilizer openers  | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust *B1532/772 Pin adjust  | Does not apply                  | BSCW1344 Dual BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Standard parallel arms, with no-till coulters, with frame mounted fertilizer openers | No row cleaner will work  | Does not apply                  | BSCW1344 Dual BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, w/o no-till coulters, w/o fertilizer openers                 | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust *B1532/772 Pin adjust BD/UMO1360 Fert opener row cleaner com- bo | UMO-100 Requires UMO- MTJ mount | BSCW1344 Dual BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, with no-till coulters, w/o fertilizer openers                | BDC1360 Floating C125R-XP Floating  | Will not work with coulters     | BSCW1344 Dual BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, w/o no-till coulters, with frame mounted fertilizer openers  | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust *B1532/772 Pin adjust  | Does not apply                  | BSCW1344 Dual BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, with no-till coulters, with frame mounted fertilizer openers | BDC1360 Floating  | Does not apply                  | BSCW1344 Dual BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, with unit mounted double disk fertilizer openers             | BDD1360 Floating C125 Floating With C125MTL-XP mount  | Does not apply                  | BSCW1344 Dual BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, with unit mounted single                                     | C125 Floating With C125MTXL-XP mount  | Does not apply                  | BSCW1344 Dual                 | RID-01 XP units require                  | DCK-01     |

|                                   |  |                    |                  |
|-----------------------------------|--|--------------------|------------------|
| disk fertilizer injector coulters |  | BSCW1544<br>Single | A56621 inner rim |
|-----------------------------------|--|--------------------|------------------|

## Planter Model JD 1750

\*Note 1: If drive shaft is under frame, floating row cleaners will require SG-01 shaft guard

\*\*Note 2: Will not work next to wheel modules

|  | Row Cleaner & Mount   | Fertilizer Opener               | Spiked Closing Wheels            | RID-01                                   | Drag Chain |
|--|---|---------------------------------|----------------------------------|--|------------|
| Standard parallel arms, w/o no-till coulters, w/o fertilizer openers                 | *BD1360 Floating *C125S-XP Floating B1332/772 Pin adjust<br>**B1532/772 Pin adjust<br>*BD/UMO1360 Fert opener row cleaner combo | UMO-100 Requires UMO- MTJ mount | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK01      |
| Standard parallel arms, with no-till coulters, w/o fertilizer openers                | *BDC1360 Floating *C125R-XP Floating  | Will not work with coulters     | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Standard parallel arms, w/o no-till coulters, with frame mounted fertilizer openers  | *BD1360 Floating *C125S-XP Floating B1332/772 Pin adjust<br>**B1532/772 Pin adjust  | Does not apply                  | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Standard parallel arms, with no-till coulters, with frame mounted fertilizer openers | No row cleaner will work  | Does not apply                  | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, w/o no-till coulters, w/o fertilizer openers                 | *BD1360 Floating *C125S-XP Floating B1332/772 Pin adjust<br>**B1532/772 Pin adjust<br>*BD/UMO1360 Fert opener row cleaner combo | UMO-100 Requires UMO- MTJ mount | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, with no-till coulters, w/o fertilizer openers                | *BDC1360 Floating *C125R-XP Floating  | Will not work with coulters     | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms w/o no-till coulters, with frame mounted fertilizer openers   | *BD1360 Floating *C125S-XP Floating B1332/772 Pin adjust<br>**B1532/772 Pin adjust  | Does not apply                  | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, with no-till coulters, with frame mounted fertilizer openers | *BDC1360 Floating   | Does not apply                  | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, with unit mounted double disk                                | *BDD1360 Floating *C125 Floating With C125MTL-XP mount  | Does not apply                  | BSCW1344 Dual<br>BSCW1544        | RID-01 XP units require A56621 inner     | DCK-01     |

|  |                                       |                |                                  |  |        |
|--|---------------------------------------|----------------|----------------------------------|--|--------|
| ferti- lizer openers   |                                       |                | Single                           | rim                                      |        |
| Extended parallel arms, with unit mounted single disk ferti- lizer injector coulters | *C125 Floating With C125MTXL-XP mount | Does not apply | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01 |

## Planter Model JD 1760 FOLDING

\*Note: Will not work next to wheel modules

|  | Row Cleaner & Mount   | Fertilizer Opener               | Spiked Closing Wheels            | RID-01                                   | Drag Chain |
|--|---|---------------------------------|----------------------------------|--|------------|
| Standard parallel arms, w/o no-till coulters, w/o fertilizer openers                 | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust *B1532/772 Pin adjust BD/UMO1360 Fert opener row cleaner combo | UMO-100 Requires UMO- MTJ mount | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK01      |
| Standard parallel arms, with no-till coulters, w/o fertilizer openers                | BDC1360 Floating C125R-XP Floating  | Will not work with coulters     | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Standard parallel arms, w/o no-till coulters, with frame mounted fertilizer openers  | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust *B1532/772 Pin adjust  | Does not apply                  | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Standard parallel arms, with no-till coulters, with frame mounted fertilizer openers | No row cleaner will work  | Does not apply                  | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, w/o no-till coulters, w/o fertilizer openers                 | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust *B1532/772 Pin adjust BD/UMO1360 Fert opener row cleaner combo | UMO-100 Requires UMO- MTJ mount | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, with no-till coulters, w/o fertilizer openers                | BDC1360 Floating C125R-XP Floating  | Will not work with coulters     | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, w/o no-till coulters, with frame mounted fertilizer openers  | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust *B1532/772 Pin adjust  | Does not apply                  | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, with no-till coulters, with frame mounted fertilizer openers | BDC1360 Floating  | Does not apply                  | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |

|  |  |                |                                  |  |        |
|--|--|----------------|----------------------------------|--|--------|
| Extended parallel arms, with unit mounted double disk fertilizer openers           | BDD1360 Floating C125 Floating With C125MTL-XP mount | Does not apply | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01 |
| Extended parallel arms, with unit mounted single disk fertilizer injector coulters | C125 Floating With C125MTXL-XP mount                 | Does not apply | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01 |

## Planter Model JD 1770 NT

\*Note: Will not work next to wheel modules

|  | Row Cleaner & Mount   | Fertilizer Opener               | Spiked Closing Wheels            | RID-01                                   | Drag Chain |
|--|---|---------------------------------|----------------------------------|--|------------|
| Standard parallel arms, w/o no-till coulters, w/o fertilizer openers                 | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust *B1532/772 Pin adjust BD/UMO1360 Fert opener row cleaner combo | UMO-100 Requires UMO- MTJ mount | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK01      |
| Standard parallel arms, with no-till coulters, w/o fertilizer openers                | BDC1360 Floating C125R-XP Floating  | Will not work with coulters     | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Standard parallel arms, w/o no-till coulters, with frame mounted fertilizer openers  | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust *B1532/772 Pin adjust  | Does not apply                  | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Standard parallel arms, with no-till coulters, with frame mounted fertilizer openers | No row cleaner will work  | Does not apply                  | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, w/o no-till coulters, w/o fertilizer openers                 | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust *B1532/772 Pin adjust BD/UMO1360 Fert opener row cleaner combo | UMO-100 Requires UMO- MTJ mount | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, with no-till coulters, w/o fertilizer openers                | BDC1360 Floating C125R-XP Floating  | Will not work with coulters     | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, w/o no-till coulters, with frame mounted fertilizer openers  | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust *B1532/772 Pin adjust  | Does not apply                  | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, with no-till   | BDC1360 Floating  | Does not apply                  | BSCW1344 Dual                    | RID-01 XP units require                  | DCK-01     |

|   |  |                |                                  |  |        |
|---|--|----------------|----------------------------------|--|--------|
| coulters, with frame mounted fertilizer openers   |  |                | BSCW1544 Single                  | A56621 inner rim                         |        |
| Extended parallel arms, with unit mounted double disk fertilizer openers                | BDD1360 Floating C125 Floating With C125MTL-XP mount | Does not apply | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01 |
| Extended parallel arms, with unit mounted single disk fertilizer injector coul-<br>ters | C125 Floating With C125MTXL-XP mount                 | Does not apply | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01 |

## Planter Model JD 1780

\*Will not work next to wheel modules

\*\*Will not work behind transport tire

|  | Row Cleaner & Mount   | Fertilizer Opener               | Spiked Closing Wheels            | RID-01                                   | Drag Chain |
|--|---|---------------------------------|----------------------------------|--|------------|
| Standard parallel arms, w/o no-till coulters, w/o fertilizer openers                 | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust<br>*B1532/772 Pin adjust<br>**BD/UMO1360 Fert opener row cleaner combo | UMO-100 Requires UMO- MTJ mount | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK01      |
| Standard parallel arms, with no-till coulters, w/o fertilizer openers                | **BDC1360 Floating **C125R-XP Floating  | Will not work with coulter      | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Standard parallel arms, w/o no-till coulters, with frame mounted fertilizer openers  | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust<br>*B1532/772 Pin adjust   | Does not apply                  | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Standard parallel arms, with no-till coulters, with frame mounted fertilizer openers | No row cleaner will work  | Does not apply                  | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, w/o no-till coulters, w/o fertilizer openers                 | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust<br>*B1532/772 Pin adjust<br>**BD/UMO1360 Fert opener row cleaner combo | UMO-100 Requires UMO- MTJ mount | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, with no-till coulters, w/o fertilizer openers                | **BDC1360 Floating **C125R-XP Floating  | Will not work with coulter      | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, w/o no-till coulters, with frame                             | **BD1360 Floating C125S-XP Floating B1332/772 Pin adjust<br>*B1532/772 Pin adjust   | Does not apply                  | BSCW1344 Dual<br>BSCW1544        | RID-01 XP units require A56621 inner     | DCK-01     |

|  |                   |                |  |  |        |
|--|-------------------|----------------|--|--|--------|
| mounted fertilizer openers   |                   |                | Single                                 | rim                                      |        |
| Extended parallel arms, with no-till coulters, with frame mounted fertilizer openers | *BDC1360 Floating | Does not apply | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP units require A56621 inner rim | DCK-01 |

## Planter Model JD 1790 FRONT ROWS

\*Note: Will not work next to wheel modules

|  | Row Cleaner & Mount   | Fertilizer Opener                        | Spiked Closing Wheels                  | RID-01  | Drag Chain |
|--|---|--|--|---|------------|
| Standard parallel arms, w/ o no-till coulters, w/o fertilizer openers                | BD1360 Floating C125S-XP<br>Floating B1332/772 Pin adjust<br>*B1532/772 Pin adjust  | UMO-100<br>Requires<br>UMO- MTJ<br>mount | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK01      |
| Standard parallel arms, with no-till coulters, w/o fertilizer openers                | BDC1360 Floating  | Will not work<br>with coulter            | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |
| Standard parallel arms, w/ o no-till coulters, with frame mounted fertilizer openers | BD1360 Floating C125S-XP<br>Floating B1332/772 Pin adjust<br>*B1532/772 Pin adjust  | Does not<br>apply                        | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |
| Standard parallel arms, with no-till coulters, with frame mounted fertilizer openers | No row cleaner will work  | Does not<br>apply                        | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |
| Extended parallel arms, w/o no-till coulters, w/o fertilizer openers                 | BD1360 Floating C125S-XP<br>Floating B1332/772 Pin adjust<br>*B1532/772 Pin adjust<br>BD/UMO1360 Fert opener row<br>cleaner combo | UMO-100<br>Requires<br>UMO- MTJ<br>mount | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |
| Extended parallel arms, with no-till coulters, w/o fertilizer openers                | BDC1360 Floating C125R-XP<br>Floating   | Will not work<br>with coulter            | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |
| Extended parallel arms, w/o no-till coulters, with frame mounted fertilizer openers  | BD1360 Floating C125S-XP<br>Floating B1332/772 Pin adjust<br>*B1532/772 Pin adjust  | Does not<br>apply                        | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |
| Extended parallel arms, with no-till coulters, with frame mounted fertilizer openers | BDC1360 Floating  | Does not<br>apply                        | BSCW1344<br>Dual<br>BSCW1544<br>Single | RID-01 XP<br>units require<br>A56621 inner<br>rim | DCK-01     |



|  |  |                |                                  |  |        |
|--|--|----------------|----------------------------------|--|--------|
| Extended parallel arms, with unit mounted double disk fertilizer openers           | BDD1360 Floating C125 Floating With C125MTL-XP mount | Does not apply | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01 |
| Extended parallel arms, with unit mounted single disk fertilizer injector coulters | C125 Floating With C125MTXL-XP mount                 | Does not apply | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01 |

## Planter Model JD 1790 REAR ROWS

\*Note 1: Will not work next to wheel modules

\*\*Note 2: Planter must be equipped with double crop package

|   | Row Cleaner & Mount   | Fertilizer Opener               | Spiked Closing Wheels            | RID-01                                   | Drag Chain |
|---|---|---------------------------------|----------------------------------|--|------------|
| Standard parallel arms , w/o no-till coulters | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust *B1532/772 Pin adjust ** BD/UMO1360 Row cleaner fert opener combo  | UMO-100 Requires UMO- MTJ mount | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK01      |
| Standard parallel arms, with no-till coulter  | **BDC1360 Floating  | Will not work with coulter      | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms , w/o no-till coulter  | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust *B1532/772 Pin adjust **BD/UMO1360 Row cleaner fert opener com- bo | UMO-100 Requires UMO- MTJ mount | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Extended parallel arms, with no-till coulter  | **BDC1360 Floating **C125R-XP Floating  | Will not work with coulter      | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |

## Planter Model JD DB BAUER BUILT BAR

\*Note 1: Planters with optional transport tires may experience interference issues with floating row cleaners

\*\*Note 2: Will not work behind transport tires

|  | Row Cleaner & Mount   | Fertilizer Opener               | Spiked Closing Wheels            | RID-01                                   | Drag Chain |
|--|---|---------------------------------|----------------------------------|--|------------|
| Standard parallel arms, w/o no-till coulters | *BD1360 Floating *C125S-XP Floating B1332/772 Pin adjust B1532/772 Pin adjust | UMO-100 Requires UMO- MTJ mount | BSCW1344 Dual<br>BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01     |
| Standard                                     | **BDC1360 Floating  | Will not work                   | BSCW1344                         | RID-01 XP units                          | DCK-01     |



|   |  |                                 |                               |  |        |
|---|--|---------------------------------|-------------------------------|--|--------|
| parallel arms, with no-till coulters          |  | with coulter                    | Dual<br>BSCW1544<br>Single    | require A56621 inner rim                 |        |
| Extended parallel arms, w/o no-till coulters  | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust B1532/772 Pin adjust BD/UMO1360 Fert opener row cleaner combo | UMO-100 Requires UMO- MTJ mount | BSCW1344 Dual BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01 |
| Extended parallel arms, with no-till coulters | BDC1360 Floating C125R-XP Floating   | Will not work with coulter      | BSCW1344 Dual BSCW1544 Single | RID-01 XP units require A56621 inner rim | DCK-01 |

## Planter Models JD 7000—7100 and JD 7200—7300

Note: If drive shaft is under planter frame, floating row cleaners will require SG-01 shaft guard

|   | Row Cleaner & Mount  | Fertilizer Opener          | Spiked Closing Wheels         | RID-01 | Drag Chain |
|---|--|----------------------------|-------------------------------|--------|------------|
| 7000 & 7100 w/o coulter                       | BKW1360 Floating C125S Floating B1332/772 Pin adjust B1532/772 Pin adjust BKW/UMO1360 Fert opener row cleaner combo  | UMO-100 with UMO-MTA mount | BSCW1341 Dual BSCW1541 Single | RID-01 | DCK-01     |
| 7000 & 7100 with unit mounted no-till coulter | C125R Floating   | Will not work with coulter | BSCW1341 Dual BSCW1541 Single | RID-01 | DCK-01     |
| 7200 & 7300 w/o coulter                       | BD1360 Floating C125S-XP Floating B1332/772 Pin adjust B1532/772 Pin adjust BD/UMO1360 Fert opener row cleaner combo | UMO-100 with UMO-MTJ mount | BSCW1343 Dual BSCW1543 Single | RID-01 | DCK-01     |
| 7200 & 7300 with unit mounted no-till coulter | BDC1360 Floating C125R-XP Floating   | Will not work with coulter | BSCW1343 Dual BSCW1543 Single | RID-01 | DCK-01     |